



Dell XPS M140 CPU Heatsink Replacement

In this guide we will replace the Microprocessor Thermal-Cooling Assembly or also known as CPU Heatsink for the Dell XPS M140.

Written By: Brian Dougenik



INTRODUCTION

In this guide, a user will be able to safely and correctly remove/replace the Microprocessor Thermal-Cooling Assembly (also known as CPU heatsink) on their Dell XPS M140 labtop, if needed. This Step-wise guide provides detailed imaging of disassembly, cautioning of notable components, and exact notations for accessing Dell XPS M140 Microprocessor Thermal-Cooling Assembly. .



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- The first step is to turn over the laptop

Step 2



- locate the slide lock for the battery.

Step 3



- Slide the lock and pull out the battery.

Step 4 — CPU Heatsink



- Locate cooling module cover on the underside of the laptop

Step 5



- Unscrew all screws that hold the cooling module cover in place

Step 6



- Unscrew the screws holding the metal bracket in place

Step 7



- Carefully remove the bracket and the module it is attached to.

Step 8



- The inside should like this after it is removed

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 08:48:26 AM.